

Submersible Wastewater Pump Type ABS AS 0530 - 0841

1006-00

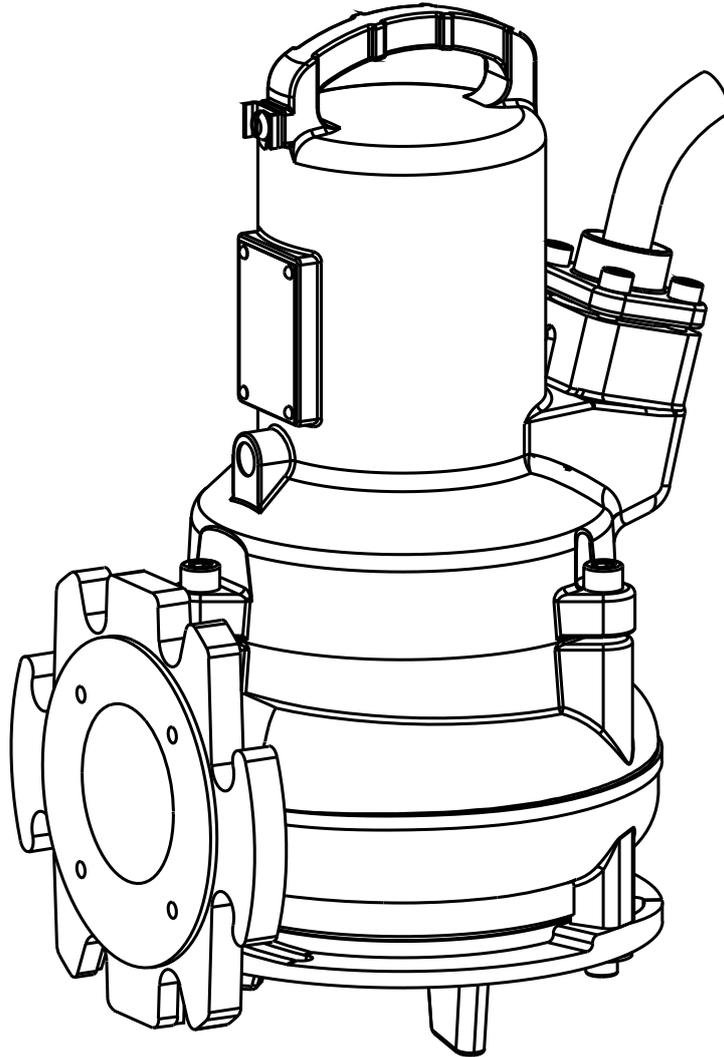

6006077-02 (10.2022)

en

Installation and Operating Instructions

Installation and Operating Instructions (Original Instructions)

Submersible Wastewater Pump Type ABS AS:

0530	0631	0830	0840
0630	0641	0831	0841

Contents

1	General	4
1.1	Intended use and application	4
1.2	Identification Code	4
2	Performance range	5
3	Safety	5
3.1	Personal protective equipment.....	6
4	Use of motors in Ex zones	6
4.1	Approvals	6
4.2	Explosion-proof approvals.....	6
4.3	General information.....	6
4.4	Special conditions for safe use of S-type, explosion-proof motors.	6
4.5	Operation of explosion-proof submersible pumps in wet-well installation	6
5	Technical data	7
5.1	Nameplate.....	7
6	General design features	8
7	Weights	9
7.1	AS - 50 Hz.....	9
7.2	AS - 60 Hz.....	9
7.3	Chain (EN 818)*	9
8	Lifting, transport and storage	10
8.1	Lifting.....	10
8.2	Transport.....	10
8.3	Storage.....	10
8.3.1	Moisture protection of motor connection cable	10
9	Set-up and installation	11
9.1	Equipotential bonding.....	11
9.2	Discharge line	11
9.3	Installation types	12
9.3.1	Submerged in concrete sump	12
9.3.2	Dry-installed	13
9.3.3	Transportable	15
9.3.4	Venting of the volute.....	15

10	Electrical connection	15
10.1	Seal monitoring	16
10.2	Temperature monitoring	17
10.2.1	Temperature sensor bimetal.....	17
10.3	Wiring diagrams	17
11	Commissioning	19
11.1	Types of operation and frequency of starting	19
11.2	Checking direction of rotation.....	19
11.3	Changing direction of rotation	20
12	Maintenance and service.....	20
12.1	General maintenance hints	20
12.2	Oil filling and changing	21
12.3	Oil quantities (liters)	21
12.4	Bottom plate adjustment (Contrablock)	22
12.4.1	Re-setting the clearance gap following wear	22
12.5	Bearings and mechanical seals	23
12.6	Changing the power cable	23
12.7	Clearing pump blockage	23
12.7.1	Instructions for operator	23
12.7.2	Instructions for service personnel	23
12.8	Cleaning	23
13	Troubleshooting Guide.....	24

Symbols and notices used in this booklet:



Presence of dangerous voltage.



Non-compliance may result in personal injury.



Hot surface - danger of burn injury.



Danger of an explosion occurring.

ATTENTION! Non-observance may result in damage to the unit or negatively affect its performance.

NOTE: Important information for particular attention.

1 General

1.1 Intended use and application

The submersible wastewater pumps of the AS series have been designed for the economical and reliable pumping of commercial and industrial sewage and can be installed dry or wet.

They are suitable for pumping of the following liquids: clear and wastewater, sewage containing solids and fibrous material, faecal matter. The AS series is suitable for modern sewage installation systems.

ATTENTION *The maximum allowable temperature of the medium pumped is 40 °C.*

NOTE: *Leakage of lubricants could result in pollution of the medium being pumped.*

AS pumps must not be used in certain applications e.g. pumping of flammable, combustible, chemical, corrosive, or explosive liquids.

ATTENTION! *Always consult with your local Sulzer representative for advice on approved use and application before installing the pump.*

1.2 Identification code

e.g. AS 0840 S 12/2 Ex

Hydraulics:

AS Product range

08..... Discharge outlet DN (cm)

40Hydraulic type

Motor:

S Modular motor version


12 Motor power P_2 kW x 10

2 Number of poles


Ex Explosive-proof

2 Performance range


Contrablock impeller 50 Hz

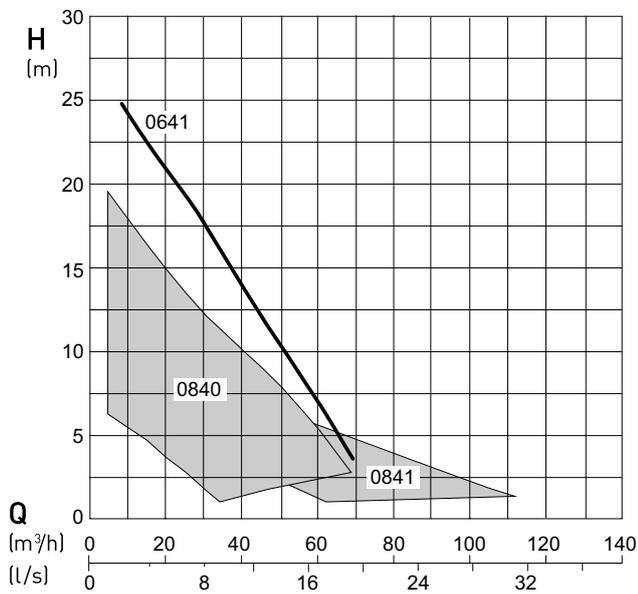


Vortex impeller 50 Hz

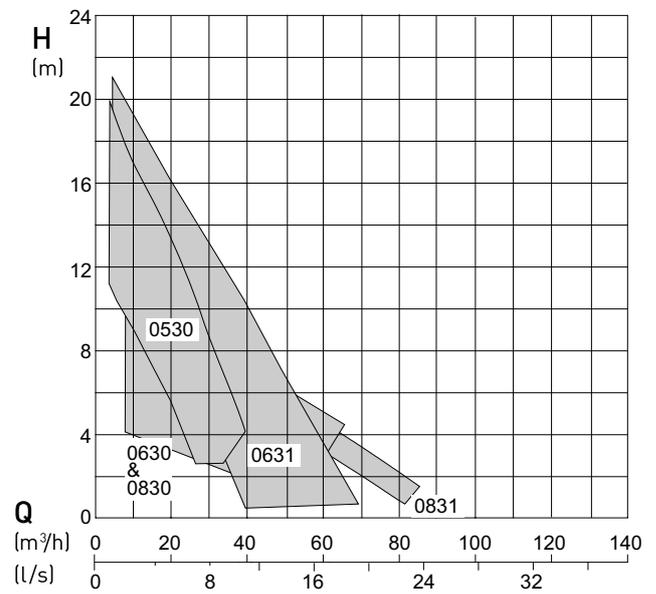

Contrablock impeller 60 Hz

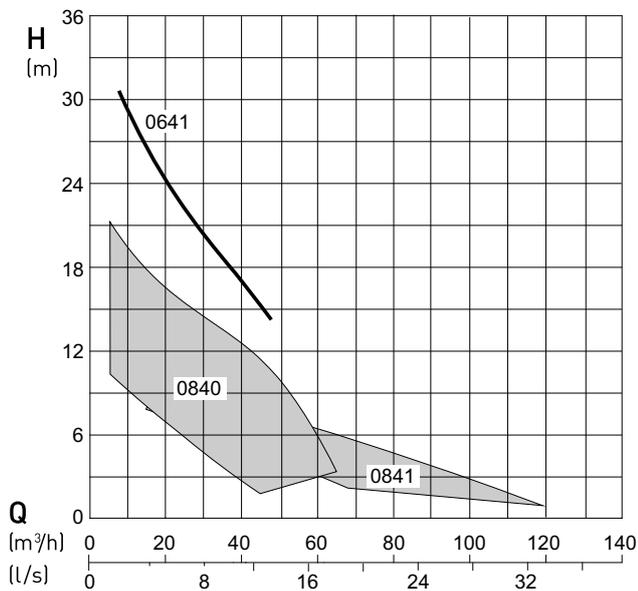

Vortex impeller 60 Hz

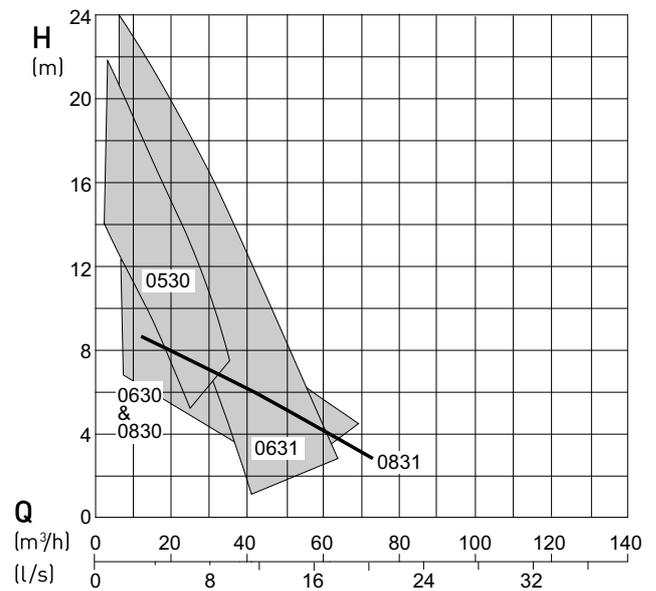

3 Safety

The general and specific health and safety guidelines are described in detail in the “Safety Instructions for Sulzer Products Type ABS” booklet. If anything is not clear or you have any questions as to safety make certain to contact the manufacturer Sulzer.

This unit can be used by children aged 8 years and above, and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, when they have been given supervision or instruction concerning the safe use of the device and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.



Under no circumstances place a hand inside the suction or discharge openings unless the pump is completely isolated from the power supply.

3.1 Personal protective equipment

Submersible electrical pumps can present mechanical, electrical, and biological hazards to personnel during installation, operation, and service. It is obligatory that appropriate personal protective equipment (PPE) is used. The minimum requirement is the wearing of safety glasses, footwear, and gloves. However, an on-site risk assessment should always be carried out to determine if additional equipment is required e.g. safety harness, breathing equipment etc.

4 Use of motors in Ex zones

4.1 Approvals

Electrical safety of the AS series is CSA and CSA(U) approved.

4.2 Explosion-proof approvals

Explosion-proof motors of the AS series have certification in accordance with Factory Mutual (FM) Class 1 Div. 1 Groups C and D (60 Hz, US), and ATEX 2014/34/EU [II 2G Ex h db IIB T4 Gb] (50 Hz).

NOTE! *Ex protection method type c “Constructional Safety” and k “Liquid immersion” in accordance with EN ISO 80079-36, EN ISO 80079-37 are used.*

4.3 General information



In hazardous areas care must be taken that during switching on and operation of the pumps, the hydraulic section is filled with water (dry installation) or alternatively is submerged (wet installation).

Other types of operation e.g. snore operation or dry running are not allowed!

1. Explosion-proof submersible pumps may only be operated with the thermal sensing system connected.
2. Temperature monitoring of explosion-proof submersible pumps has to be carried out by bi-metallic temperature limiters or thermistors according to DIN 44 082 connected to a suitable release device which is certified in accordance with EC directive 2014/34/EU.
3. Float switches, and any external seal monitoring (DI leakage sensor), must be connected via an intrinsically safe electrical circuit, Protection Type EX (i), in accordance with IEC 60079-11.

ATTENTION! *Repair work on explosion-proof motors may only be carried out in authorized workshops by qualified personnel using original parts supplied by the manufacturer. Otherwise the Ex approvals are no longer valid. All Ex-relevant components and dimensions can be found in the workshop manual and the spare parts list.*

ATTENTION! *After repair work in unauthorized workshops by unqualified personnel the Ex approvals are no longer valid. After such repair the unit must not be operated in hazardous areas, and the Ex nameplate has to be removed and replaced by the standard version.*

NOTE: *All regulations and guidelines, which may vary from country to country, must be followed without exception.*

4.4 Special conditions for safe use of S-type, explosion-proof motors.

1. The integral supply cable shall be suitably protected from mechanical damage and terminated within an appropriate termination facility.
2. Pump motors rated for use with 50/60 Hz sinusoidal supplies shall have the thermal protection devices connected in such a way that the machine is isolated from the supply in the event of the stator reaching 130 °C.
3. These motor units are not intended for user service or repair. Any operation that may affect the explosion protection characteristics should be referred to the manufacturer. Repairs on flameproof joints may only be performed in accordance with the manufacturer's design specifications. Repair on the basis of the values in tables 1 and 2 of EN 60079-1 is not permitted.

4.5 Operation of explosion-proof submersible pumps in wet-well installation

It must be ensured that the hydraulic of the Ex submersible pump is always fully submerged during start-up and operation!

5 Technical data

Detailed technical information is available in the technical data sheet “Submersible Wastewater Pump Type ABS AS 0530 - 0841” which can be downloaded from www.sulzer.com > Products > Pumps > Submersible Pumps.

Maximum noise level ≤ 70 dB. In some types of installations it is possible that during pump operation the noise level of 70 dB(A) or the measured noise level may be exceeded.

5.1 Nameplate

We recommend that you record the data from the standard nameplate on the pump in the corresponding form below, and maintain it as a source of reference for the ordering of spare parts, repeat orders and general queries. Always state the pump type, item number and serial number in all communications.

SULZER		IP68	CE	0598	XX/XXXX
			II 2G Ex db h IIB T4 Gb Baseelsta 03ATEX xxxx		
Typ					Insul.Cl.F
Nr	Sn				
UN	IN	Cos ϕ	Ph	Hz	
P1:	P2:			n	Amb. Max 40°C
Qmax	Hmax			∇ Max	
DN	Hmin			\emptyset Imp	
	Connection information for the temperature controller is in the installation instructions. Do not open while energised.		Anschlussinweise für die Temperaturwächter in der Montage- u. Betriebsanleitung beachten. Nicht unter Spannung öffnen.		
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com					

Ex version

SULZER		CE	xx/xxxx	IP 68
Typ				
Nr	Sn			
UN	IN	Cos ϕ	Ph	Hz
P1:	P2:			n
Qmax	Hmax			∇ Max
DN	Hmin			\emptyset Imp
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com				
Made in Ireland				

Standard version

Legend

Typ	Pump type	
Nr	Item no.	
Sn	Serial no.	
xx/xxxx	Production date (week/year)	
UN	Rated voltage	V
IN	Rated current	A
Cos ϕ	Power factor	pf
Ph	Number of phases	
Hz	Frequency	Hz

P1	Rated input power	kW
P2	Rated output power	kW
n	Speed	r/min
Qmax	Max. flow	m ³ /h
Hmax	Max. head	m
Hmin	Min. head	m
\emptyset Imp.	Impeller diameter	mm
DN	Discharge diameter	mm
∇ Max	Max submersible depth	m

SULZER			IP68
APPROVED Explosion Proof CL.1 DIV.1 GR.C+D 000000			
SUBMERSIBLE WASTEWATER PUMP MOTOR XX/XXXX			
Model:	#####	Sn	
Volts:	P2:	F.L. Amps	
Hz	Ph	RPM:	Insul.Cl.F NEMA Code: A
AMB. TEMP.40 °C	OPER. TEMP. T3C	∇ Max	
Pump:	Imp. Dia:		
Flow Max:	Hmax		
DO NOT REMOVE COVER WHILE CIRCUIT IS ALIVE			
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com			
Made in Ireland			

FM version

SULZER			IP68
LR51412			
000000			
XX/XXXX			
Model:	Sn		
Nr.			
Volts:	F.L. Amps:		
Hz	Phase	RPM:	P2:
Max. Amb. Temp.40 °C	Insul.Cl.F	NEMA Code: A	
Imp. Dia:	∇ Max		
Flow Max:	Hmax		
Use with approved motor control that matches motor input full load amps. Utiliser un démarreur approuvé covenant au courant a pleine charge du moteur.			
Sulzer Pump Solutions Ireland Ltd. Wexford, Ireland. www.sulzer.com			
Made in Ireland			

Standard version (Canada)


Legend (FM and CSA)

Model (FM)	Motor type	
Model (CSA)	Pump type	
Pump	Pump type	
#####	Item no.	
Sn	Serial no.	
Nr	Item no.	
xx/xxxx	Production date (week/year)	
Volts	Rated voltage	V
P2	Rated output power	kW

F.L.Amps	Full load amps	A
Hz	Frequency	
Ph	Number of phases	
RPM	Speed	rpm
Imp. dia	Impeller diameter	mm
▽ Max	Max submersible depth	m
Flow Max	Rated discharge	m ³ /h
Hmax	Max. head	m

6 General design features

AS is a submersible sewage and wastewater pump. The water-pressure-tight, encapsulated, flood-proof motor and the pump section form a compact, robust, modular construction.

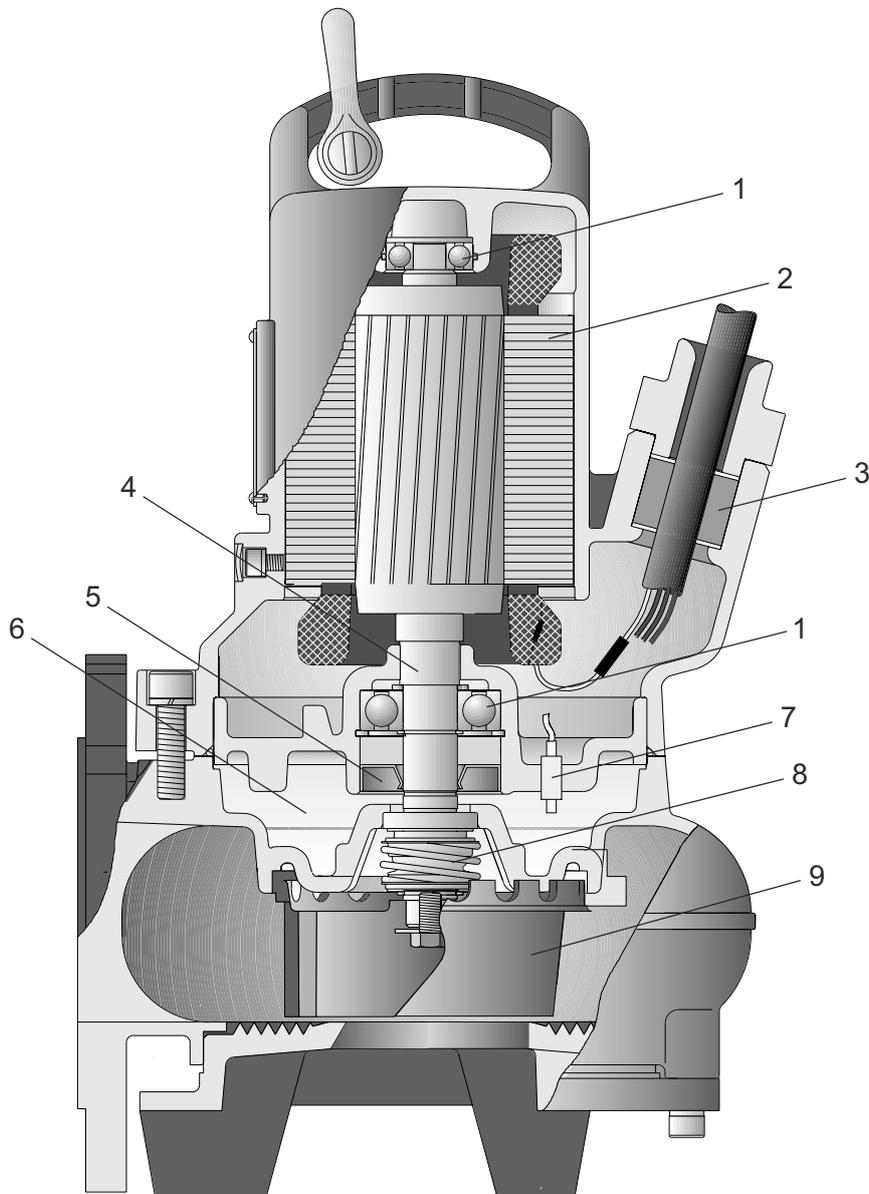

- | | | | | | |
|---|---|---|-----------------------|---|--------------------------------|
| 1 | Lubricated-for-life ball bearings | 4 | Stainless steel shaft | 7 | Leakage sensor (DI) |
| 2 | Motor with thermal sensor in air-filled motor housing | 5 | Lipseal | 8 | Sic/Sic mechanical seal |
| 3 | Watertight cable entry | 6 | Seal chamber | 9 | Impeller - Contrablock version |

7 Weights

NOTE: Weight on nameplate is for pump and cable only.

7.1 AS - 50 Hz

AS		Pedestal bracket and fasteners	Horizontal supports	Skirtbase (transportable)	Pump*
		kg	kg	kg	kg
0530	S12/2W, S12/2D, S17/2D	2	n.a.	n.a.	34
	S26/2D	2	n.a.	n.a.	40
0630	S10/4W, S13/4D	3	1.2	2.7	37
	S22/4D	3	1.2	2.7	42
0631	S12/2W, S12/2D, S17/2W, S17/2D	3	n.a.	3.5	38
	S30/2D	3	n.a.	3.5	46
0641	S30/2D	3	n.a.	3.5	42
0830	S10/4W, S13/4D	2	1.2	2.7	40
	S22/4D	2	1.2	2.7	42
0831	S22/4D	2	6.5	6.0	55
0840	S12/2W, S12/2D, S17/2D	2	1.2	n.a.	35
	S26/2D	2	1.2	n.a.	40
0841	S13/4D	2	6.5	6.0	49
	S22/4D	2	6.5	6.0	58

* With 10 m cable

7.2 AS - 60 Hz

AS		Pedestal bracket and fasteners	Horizontal supports	Skirtbase (transportable)	Pump*
		kg	kg	kg	kg
0530	S16/2W, S16/2D, S18/2W, S18/2D	2	n.a.	n.a.	34
	S30/2D	2	n.a.	n.a.	40
0630	S10/4W, S10/4D, S16/4D	3	1.2	2.7	37
	S25/4D	3	1.2	2.7	42
0631	S16/2W, S16/2D, S18/2W, S18/2D	3	n.a.	3.5	38
	S35/2D	3	n.a.	3.5	46
0641	S35/2D	3	n.a.	3.5	42
0830	S10/4W, S10/4D, S16/4D	2	1.2	2.7	40
	S25/4D	2	1.2	2.7	42
0831	S25/4D	2	6.5	6.0	55
0840	S16/2W, S16/2D, S18/2W, S18/2D	2	1.2	n.a.	35
	S30/2D	2	1.2	n.a.	40
0841	S16/4D	2	6.5	6.0	49
	S25/4D	2	6.5	6.0	58

* With 10 m cable

7.3 Chain (EN 818)*

Length (m / ft)	Weight (kg / lbs) WLL 320
1.6 / 5.24	0.74 / 1.63
3.0 / 9.84	1.28 / 2.82
4.0 / 13.12	1.67 / 3.68
6.0 / 19.68	2.45 / 5.40
7.0 / 22.96	2.84 / 6.26



Weights of accessories, other than or in addition to those listed, must also be included when specifying the working load of any lifting equipment. Please consult with your local Sulzer representative prior to installation.

* For chain supplied by Sulzer only.

8 Lifting, transport and storage

8.1 Lifting

ATTENTION! *Observe the total weight of the Sulzer units and their attached components! (see nameplate for weight of base unit).*

The duplicate nameplate provided must always be located and visible close to where the pump is installed (e.g. at the terminal boxes / control panel where the pump cables are connected).

NOTE! *Lifting equipment must be used if the total unit weight and attached accessories exceeds local manual lifting safety regulations.*

The total weight of the unit and accessories must be observed when specifying the safe working load of any lifting equipment! The lifting equipment, e.g. crane and chains, must have adequate lifting capacity. The hoist must be adequately dimensioned for the total weight of the Sulzer units (including lifting chains or steel ropes, and all accessories which may be attached). The end user assumes sole responsibility that lifting equipment is certified, in good condition, and inspected regularly by a competent person at intervals in accordance with local regulations. Worn or damaged lifting equipment must not be used and must be properly disposed of. Lifting equipment must also comply with the local safety rules and regulations.

NOTE! *The guidelines for the safe use of chains, ropes and shackles supplied by Sulzer are outlined in the Lifting Equipment manual provided with the items and must be fully adhered to.*

8.2 Transport

During transport, care should be taken that the pump cannot fall over or roll and cause damage to the pump or injury to the person. The pumps of the AS series have an integrated lifting handle with a shackle fitted to which a chain can be attached for lifting or suspension of the pump.



The pump must be raised only by the lifting handle and never by the power cable.



After removal from its original packaging we recommend that during future transportation of the pump it is laid on its side and securely strapped to a pallet.

8.3 Storage

1. During long periods of storage the pump should be protected from moisture and extremes of cold or heat.
2. To prevent the mechanical seals from sticking it is recommended that occasionally the impeller is rotated by hand.
3. If the pump is being taken out of service the oil should be changed before storage.
4. After storage the pump should be inspected for damage, the oil level should be checked, and the impeller checked to ensure it rotates freely.

8.3.1 Moisture protection of motor connection cable

During storage or installation, prior to the laying and connection of the power cable, particular attention should be given to the prevention of water damage in locations which could flood.

ATTENTION! *If there is a possibility of water ingress then the cable should be secured so that the end is above the maximum possible flood level. Take care not to damage the cable or its insulation when doing this.*

ATTENTION! *The ends of the cables should never be immersed in water.*

9 Set-up and installation

AS pumps are designed for wet well vertical installation on a fixed pedestal or as transportable on a movable stand (skirtbase). The pumps are also suitable for horizontal (except 0631, 0641) or vertical (only 0831, 0841) dry installation.

The regulations of DIN 1986 as well as local regulations should be observed when installing the pump.

The following guidelines must be observed when setting the lowest switch off point for AS pumps:

- Care must be taken during switching on and operation that the hydraulic section is filled with water (dry installation) or alternatively is submerged or under water (wet installation). Other types of operation e.g. snore operation or dry running are not allowed!
- The minimum submergence allowed for specific pumps can be found on the dimension installation sheets available by download from www.sulzer.com > Products > Pumps > Submersible Pumps.




The regulations covering the use of pumps in sewage applications, together with all regulations involving the use of explosion-proof motors, should be observed. The cable ducting to the control panel should be sealed off in a gas-tight manner by the use of a foaming material after the cable and control circuits have been pulled through. In particular the safety regulations covering work in enclosed areas in sewage plants should be observed together with general good technical practice.

9.1 Equipotential bonding



In pump stations/tanks, equipotential bonding must be carried out according to EN 60079-14:2014 [Ex] or IEC 60364-5-54 [non-Ex] (Regulations for the installation of pipelines, protective measures in high voltage systems).

Connection point:

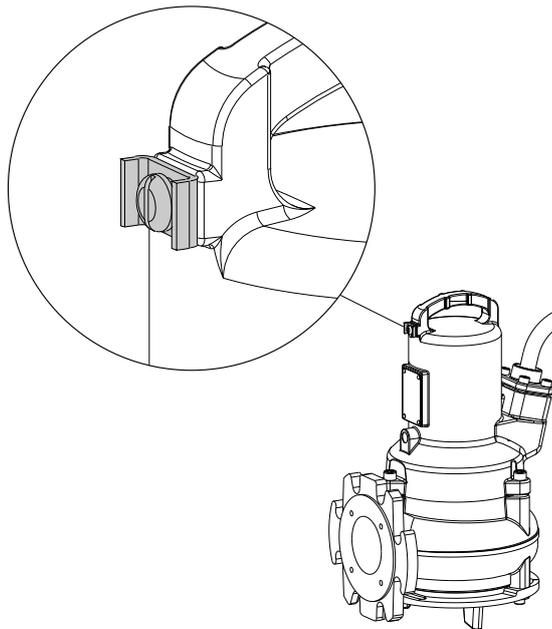

9.2 Discharge line


The discharge line must be installed in compliance with the relevant regulations. DIN 1986/100 and EN 12056 applies in particular to the following:

- The discharge line should be fitted with a backwash loop (180° bend) located above the backwash level and should then flow by gravity into the collection line or sewer.
- The discharge line should not be connected to a down pipe.
- No other inflows or discharge lines should be connected to this discharge line.

ATTENTION *The discharge line should be installed so that it is not affected by frost.*

9.3 Installation types

9.3.1 Submerged in concrete sump

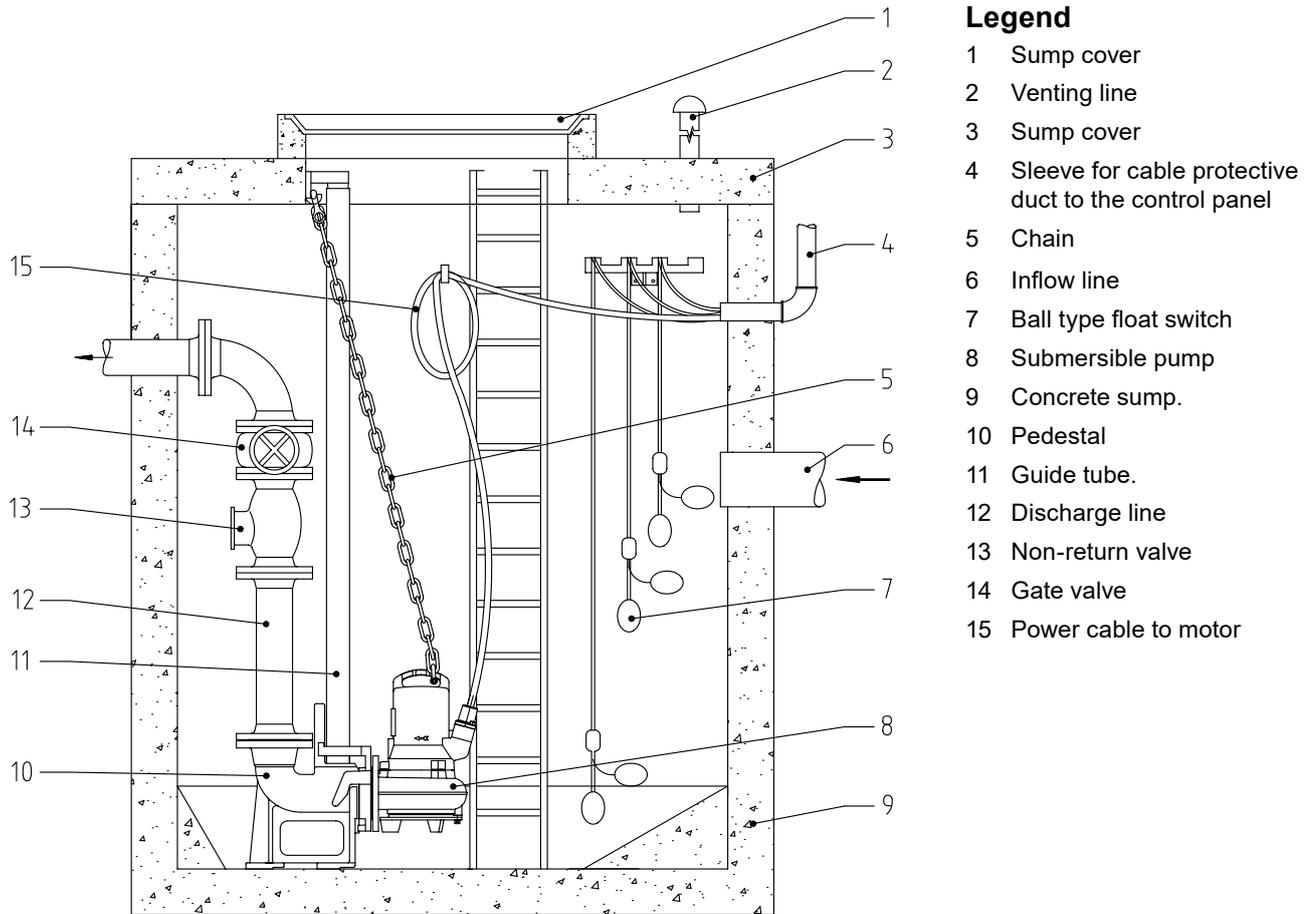

Legend

- 1 Sump cover
- 2 Venting line
- 3 Sump cover
- 4 Sleeve for cable protective duct to the control panel
- 5 Chain
- 6 Inflow line
- 7 Ball type float switch
- 8 Submersible pump
- 9 Concrete sump.
- 10 Pedestal
- 11 Guide tube.
- 12 Discharge line
- 13 Non-return valve
- 14 Gate valve
- 15 Power cable to motor

The pump is installed using the Sulzer pedestal kit as specified below for the particular AS model (assembly leaflet is supplied with kit).


AS	Size	Part number
0530	2" without bend	62320560
0630, 0631, 0641	DN 65: 90° cast bend	62320673
	DN 80 without bend	62320557
0830, 0831, 0840, 0841	DN 80: 90° cast bend	62320649
	DN 80: 90° cast bend (plug/clamp connection)	62320650

Particular attention should be paid to:

- the provision of venting to the sump
- installation of isolating valves on the discharge line
- removal of any slack from the power cable by coiling and securing it to the sump wall so that it cannot be damaged during operation of the pump

ATTENTION! *The power cable should be handled carefully during installation and removal of the pump in order to avoid damage to the insulation. When raising the pump out of the concrete sump with the hoist ensure that the connection cables are lifted out simultaneously as the pump itself is being raised.*


Lowering the pump on the guide rail:

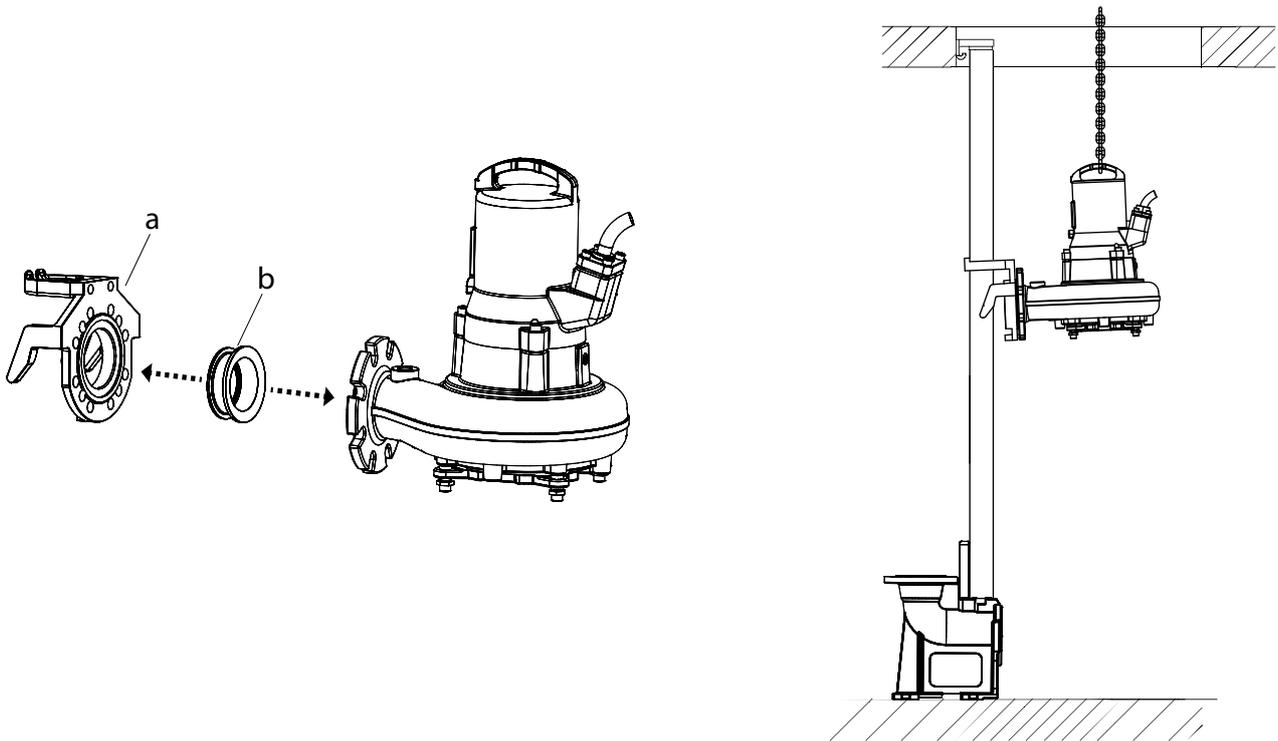

- Fit the pedestal coupling bracket (a) and seal (b) to the discharge flange of the pump.
- Fit a chain to the shackle on the lifting handle and using a hoist lift the pump into position where the pedestal bracket can slide into place on the guide rail.
- Lower the pump slowly down along the guide rail at a slight angle.
- The pump couples automatically on the pedestal, and seals to a leak-tight connection by the compression from the combination of its own weight and the fitted seal.

9.3.2 Dry-installed


Horizontal

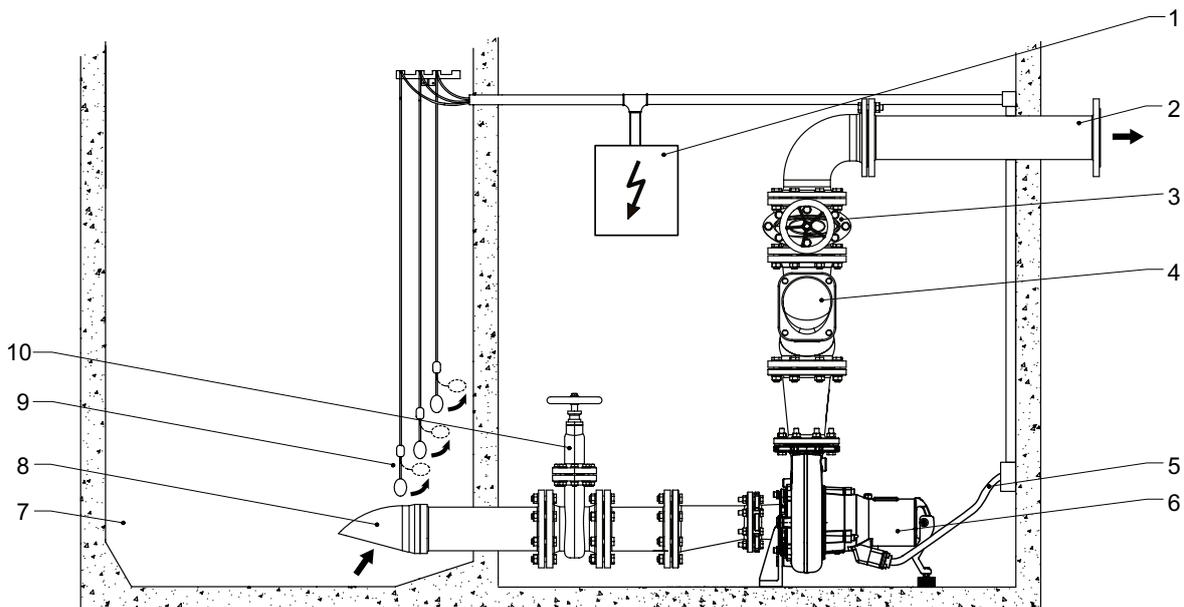

The pump is installed using the Sulzer horizontal support kit as specified below for the particular AS model (assembly leaflet is supplied with kit).

AS	Part number
0630, 0830, 0840	62665103
0831, 0841	61825001

Vertical

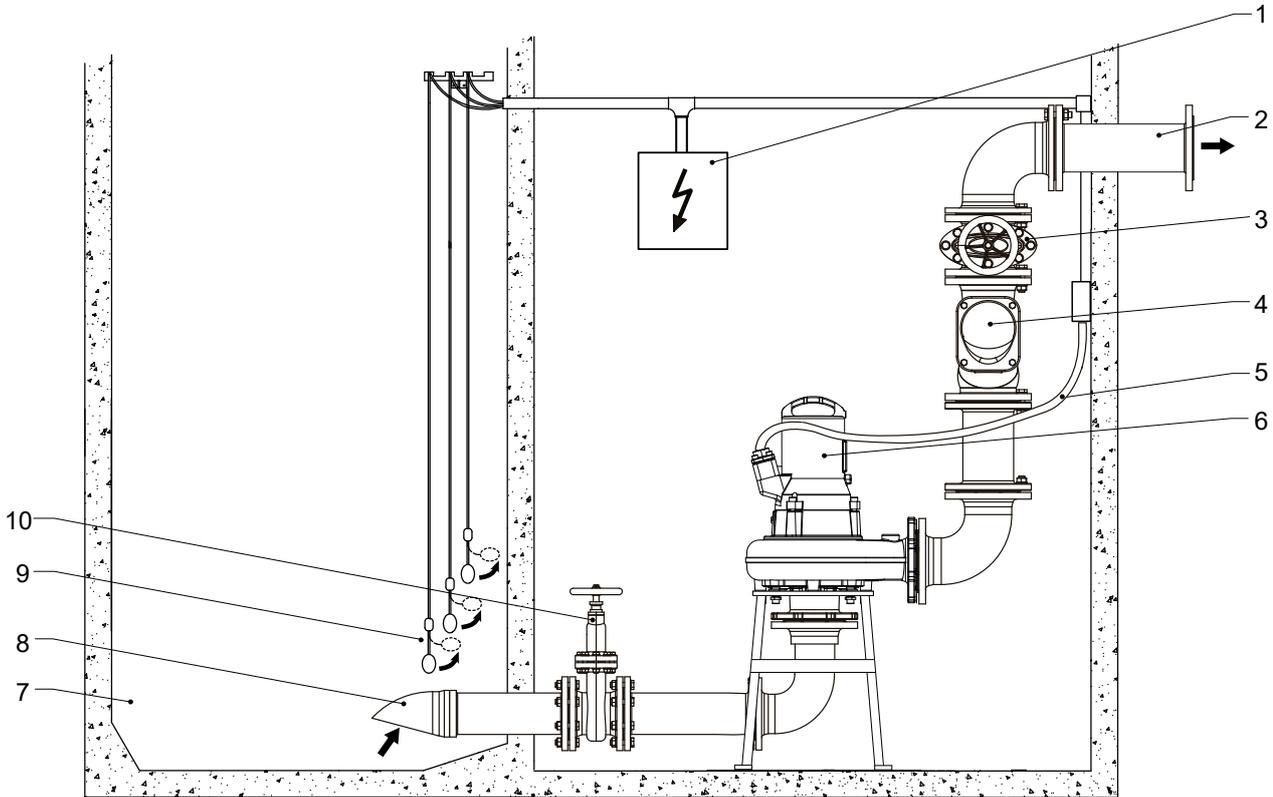

- | | | | | | |
|---|----------------|---|---|----|------------------------|
| 1 | Control panel | 4 | Non-return valve | 7 | Collection sump |
| 2 | Discharge line | 5 | Power cable from motor to control panel | 8 | Inflow line |
| 3 | Gate valve | 6 | Pump | 9 | Ball-type float switch |
| | | | | 10 | Gate valve |

Particular attention should be paid to:

- the provision of venting to the sump
- installation of isolating valves on the inlet and discharge lines
- removal of any slack from the power cable by coiling and securing it so that it cannot be damaged during operation of the pump


ATTENTION! *The power cable should be handled carefully during installation and removal of the pump in order to avoid damage to the insulation.*



When dry-installed the pump motor housing may become hot. In such a case, to avoid burn injury, allow to cool down before handling.

9.3.3 Transportable

For transportable installation the AS is fitted to a skirtbase.

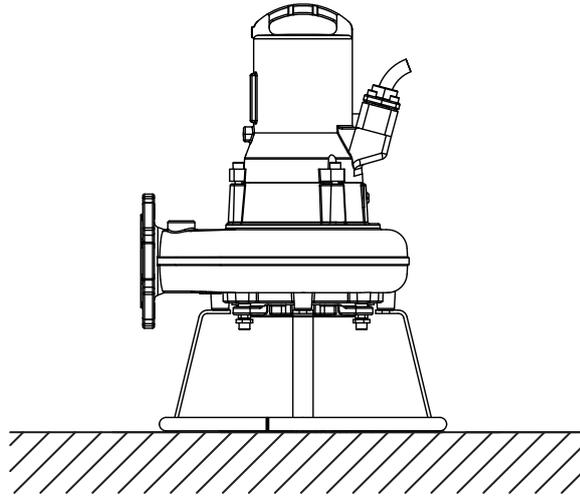

Place the pump on a firm surface which will prevent it from overturning or burrowing down. The skirtbase can also be bolted down to the floor surface, or the pump suspended slightly by the lifting handle. Connect the discharge pipe and cable.



Arrange the cable run so that the cables will not be kinked or nipped.



Submersible pumps used outdoors must be fitted with a power cable of at least 10 meter length. Other regulations may apply in different countries.

Hoses, pipes and valves must be sized to suit the pump performance.

9.3.4 Venting of the volute

After lowering the pump into a sump full of water, an air lock may occur in the volute and cause pumping problems. To clear the air lock, shake the pump, or raise the pump in the medium and then lower it again. If necessary, repeat this venting procedure.

We strongly recommend that dry-installed AS pumps are vented back into the sump by means of the drilled and tapped hole provided in the volute (AS 0831 & AS 0841).

10 Electrical connection



Before commissioning, an expert should check that one of the necessary electrical protective devices is available. Earthing, neutral, earth leakage circuit breakers, etc. must comply with the regulations of the local electricity supply authority and a qualified person should check that these are in perfect order.

ATTENTION! *The power supply system on site must comply with local regulations with regard to cross-sectional area and maximum voltage drop. The voltage stated on the nameplate of the pump must correspond to that of the mains.*

Suitably rated means of disconnection shall be incorporated in the fixed wiring by the installer for all pumps in accordance with applicable local National codes.

The power supply cable must be protected by an adequately dimensioned slow-blow fuse corresponding to the rated power of the pump.



The incoming power supply as well as the connection of the pump itself to the terminals on the control panel must comply with the circuit diagram of the control panel as well as the motor connection diagrams and must be carried out by a qualified person.

All relevant safety regulations as well as general good technical practice must be complied with.

Submersible pumps used outdoors must be fitted with a power cable of at least 10 metre length. Other regulations may apply in different countries.

In all installations, the power supply to the pump must be via a residual current device (e.g. RCD, ELCB, RCBO etc.) with a rated residual operating current in accordance with local regulations. For installations not having a fixed residual current device the pump must be plugged into the power supply through a portable version of the device.

All three phase pumps must be installed with motor starting and overload protective devices in the fixed wiring by the installer. Such motor control and protective devices must comply with the requirements of IEC standard 60947-4-1. They must be rated for the motor that they control, and wired and set/adjusted according to the instructions provided by the manufacturer. In addition, the overload protective device that is responsive to the motor current shall be set / adjusted to 125% of the marked rated current.



Risk of electrical shock. Do not remove cord and strain relief and do not connect conduit to pump.

NOTE: Please consult your electrician.

The following components should be incorporated in the fixed wiring for all single phase pumps:

- Motor starting and/or running capacitor that complies with the requirements of IEC 60252-1 and rated as specified in the installation instruction. The capacitor shall be class S2 or S3.
- Motor contactor that complies with the requirements of IEC Standard 60947-4-1 and rated for the motor that it controls.




This pump has not been investigated for use in swimming pools.

10.1 Seal monitoring

AS pumps can be fitted with an optional leakage sensor (DI) to detect and alert to the ingress of water into the motor chamber (non-Ex and Ex), and seal chamber (non-Ex only). Fitted as standard on 60 Hz Ex (FM).

In order to integrate this seal monitoring function into the control panel of the pump it is necessary to fit a Sulzer DI module and connect this in accordance with the circuit diagram below.

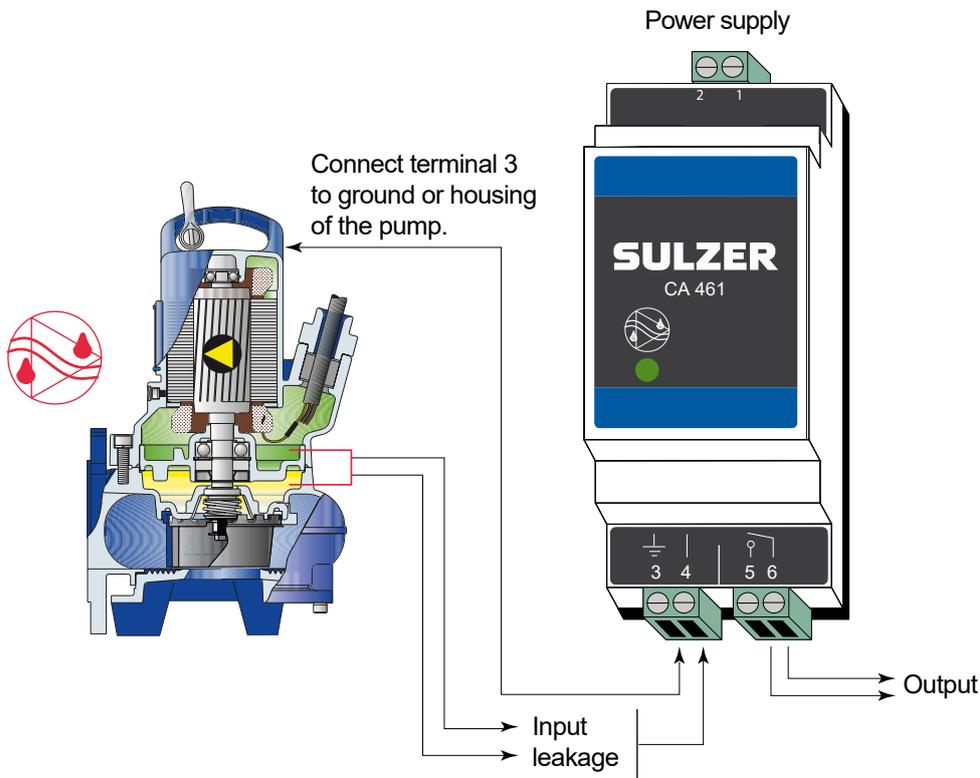

Sulzer leakage control type CA 461

Electronic amplifier:

110 - 230 V AC 50/60 Hz (CSA). Part No.: 16907010.

18-36 VDC, SELV. Part No.: 16907011.

ATTENTION! *Maximum relay contact loading: 2 Ampere*

ATTENTION! *It is very important to note that with the connection example above it is not possible to identify which sensor/alarm is being activated. As an alternative Sulzer highly recommends to use a separate CA 461 module for each sensor/input, to allow not only identification but also to prompt to the appropriate response to the alarm category/severity.*

Multiple-input leakage control modules are also available. Please consult with your local Sulzer representative.


ATTENTION! *If the leakage sensor (DI) is activated the unit must be immediately taken out of service. Please contact your Sulzer service centre.*

10.2 Temperature monitoring

Bimetallic thermal sensors in the stator windings protect the motor from overheating (optional for non-Ex and as standard for Ex).

NOTE: *Running the pump with the thermal and/or leakage sensors disconnected will invalidate related warranty claims.*

10.2.1 Temperature sensor bimetal

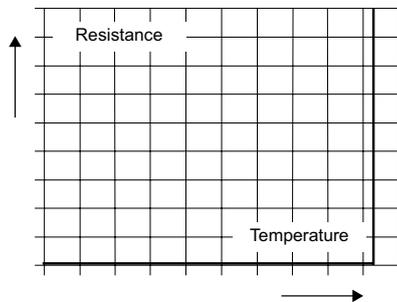


Application	Option
Function	Temperature switch using the bimetallic principle, which opens at a rated temperature
Switching	Taking care not to exceed the allowable switching current, these can be fitted directly into the control circuit

Curve showing principle of operation of bimetallic temperature limiter


Operating voltage ...AC	100 V to 500 V ~
Rated voltage AC	250 V
Rated current AC $\cos \varphi = 1,0$	2.5 A
Rated current AC $\cos \varphi = 0,6$	1.6 A
Max. switching current at I_N	5.0 A

ATTENTION! *The maximum switching ability of the thermal sensors is 5 A, the rated voltage 250 V.*


10.3 Wiring diagrams

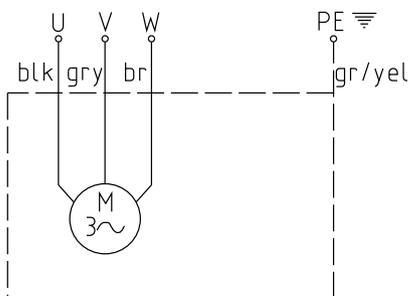


Three phase wiring

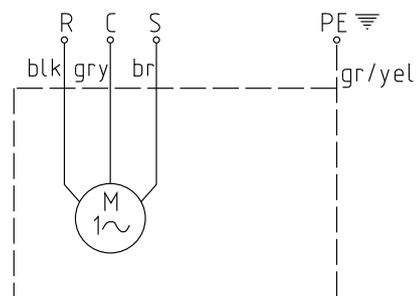


Single phase wiring

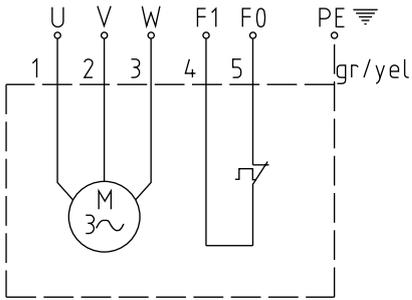


Three phase wiring with temperature limiter

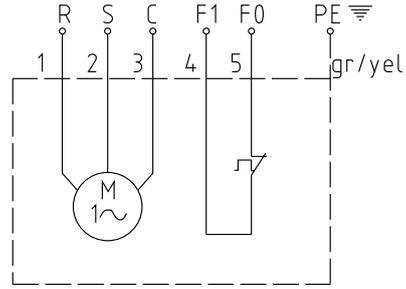

Single phase wiring with temperature limiter

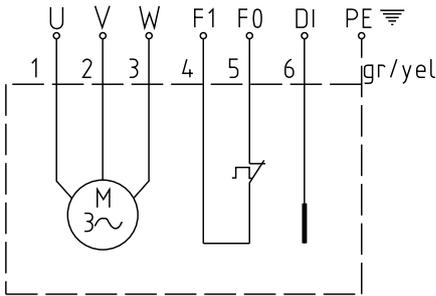

Three phase wiring with temperature limiter and DI

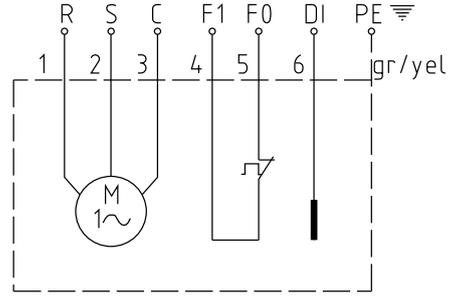

Single phase wiring with temperature limiter and DI

Three phase

AS 50 Hz:

S12/2 D, S13/4 D, S17/2 D, S22/4 D, S26/2 D, S30/2 D,

AS 60 Hz:

S10/4 D, S16/2 D, S13/4 D, S16/4 D, S17/2 D S18/2 D,
S22/4 D, S25/4 D, S26/2 D, S30/2 D, S35/2 D

NOTE:

- | | |
|-----------------------|------------------------|
| U, V, W = Live | Di = Seal monitor |
| PE = Earth | F1/F0 = Thermal sensor |
| gr/yel = Green/yellow | R = Run |
| blk = Black | C = Common (Neutral) |
| gry = Grey | S = Start |
| br = Brown | |

Single phase

AS 50 Hz:

S10/4 W, S12/2 W

AS 60 Hz:

S10/4 W, S16/2 W, S18/2 W

NOTE: USA

- | |
|----------------------|
| U, V, W = T1, T2, T3 |
| F1 = 1 |
| F0 = 2 |
| Di = 3 |

ATTENTION *Explosion-proof pumps may only be used in explosive zones with the thermal sensors fitted (leads: FO, F1).*

ATTENTION *It is important to use the correct capacitors with single phase pumps. Use of incorrect capacitors will lead to motor burn-out.*

11 Commissioning



The safety hints in the previous sections must be observed!



In explosive zones care must be taken that during switching on and operation of the pumps, the pump section is filled with water (dry running) or alternatively is submerged or under water (wet installation). Ensure in this case that the minimum submergence given in the data sheet is observed. Other types of operation e.g. snore operation or dry running are not allowed.

Before commissioning, the unit should be checked and a functional test carried out. Particular attention should be paid to the following:

- Have the electrical connections been carried out in accordance with regulations?
- Have the thermal sensors been connected?
- Is the seal monitoring device (where fitted) correctly installed?
- Is the motor overload switch correctly set?
- Have the power and control circuit cables been correctly fitted?
- Was the sump cleaned out?
- Have the inflow and outflows of the pump station been cleaned and checked?
- Is the direction of rotation correct - even if run via an emergency generator?
- Are the level controls functioning correctly?
- Are the required gate valves (where fitted) open?
- Do the non-return valves (where fitted) function easily?
- Have the hydraulics been vented in the case of dry installed pumps?
- Has the volute been vented (see Sec. 9.3.4) ?

11.1 Types of operation and frequency of starting

AS has been designed for intermittent use only (S3, 25%) when dry-installed, and continuous use (S1) when submerged, but only to the minimum water levels specified below.

AS	0530	0630	0631	0641	0830	0831	0840	0841
Minimum water level (mm)	331	348	346	346	408	445	379	450

11.2 Checking direction of rotation



The safety hints in the previous sections must be observed!

When three phase units are being commissioned for the first time, and also when used on a new site, the direction of rotation must be carefully checked by a qualified person.



When checking the direction of rotation, the unit should be secured in such a manner that no danger to personnel is caused by the rotating impeller or by the resulting air flow. Do not place your hand into the hydraulic system!



The direction of rotation should only be altered by a qualified person.



When carrying out the direction of rotation check as well as when starting the unit pay attention to the **START REACTION**. This can be very powerful.

ATTENTION

The direction of rotation is correct if the impeller/propeller rotates in a clockwise manner when viewing down from the top of the placed unit.



1020-00

ATTENTION

The start reaction is anti clockwise.

NOTE *If a number of pumps are connected to a single control panel then each unit must be individually checked.*

ATTENTION *The mains supply to the control panel should have a clockwise rotation. If the leads are connected in accordance with the circuit diagram and lead designations, the direction of rotation will be correct.*

11.3 Changing direction of rotation



The safety hints in the previous sections must be observed!



The direction of rotation should only be altered by a qualified person.

If the direction of rotation is incorrect then this is altered by changing over two phases of the power supply cable in the control panel. The direction of rotation should then be rechecked.

NOTE *The direction of rotation measuring device monitors the direction of rotation of the mains supply or that of an emergency generator.*

12 Maintenance and service



Before commencing any maintenance work the unit should be completely disconnected from the mains by a qualified person and care should be taken that it cannot be inadvertently switched back on.



Repair work must only be carried out by qualified personnel approved by Sulzer.



When carrying out any on-site service or maintenance work i.e. cleaning, venting, fluid inspection or changing, and adjustment of the bottom plate gap, the safety regulations covering work in enclosed areas of sewage installations as well as good general technical practices should be followed.



Under continuous running conditions the pump motor housing can become very hot. To prevent burn injury allow to cool down before handling.



Coolant temperature can reach up to 60 °C under normal operating conditions.

NOTE *The maintenance hints given here are not designed for “do-it-yourself” repairs as special technical knowledge is required.*

12.1 General maintenance hints

Sulzer submersible pumps are reliable quality products, each being subjected to careful final inspection. Lubricated-for-life ball bearings, together with monitoring devices, ensure optimum pump reliability provided that the pump has been connected and operated in accordance with the operating instructions. However, should a malfunction occur, do not improvise, but ask your Sulzer Customer Service Department for assistance. This applies particularly if the pump is continually switched off by the current overload in the control panel, by the thermal sensors of the thermo-control system, or by the seal monitoring system (DI).

Regular inspection and care is recommended to ensure a long service life. Service intervals vary for AS pumps depending on installation and application. For recommended service interval details contact your local Sulzer Service Centre. A maintenance contract with our Service Department will guarantee the best technical service.

When carrying out repairs, only original spare parts supplied by the manufacturer should be used.

Sulzer warranty conditions are only valid provided that any repair work has been carried out in a Sulzer approved workshop and where original Sulzer spare parts have been used.

NOTE: *ATEX- and FM-rated AS pumps are approved for use in hazardous locations. If an Ex-rated pump is serviced or repaired in a workshop that is not Ex-approved then it must no longer be used in hazardous locations. In that case the Ex nameplate must be removed and replaced by the standard nameplate, or where instead a standard and a secondary Ex nameplate is fitted to the pump the secondary nameplate must be removed.*

ATTENTION! *Repair work on explosion-proof motors may only be carried out in authorized workshops by qualified personnel using original parts supplied by the manufacturer. Otherwise the Ex-approvals are no longer valid. Detailed guidelines, instructions and dimensional drawings for the service and repair of Ex-approved pumps are in the Workshop Manual.*

Motor chamber

The motor chamber should be inspected every 12 months to ensure it is free from moisture.

12.2 Oil filling and changing

The seal chamber between the motor and the hydraulic section has been filled at manufacture with lubricating oil. An oil change is only necessary if a fault occurs.


Draining:

Remove screw (1) and sealing washer (2). Place pump in a horizontal position with the plug hole underneath.

Filling:

Rotate the pump into a horizontal position with the plug hole to the top. Slowly fill oil into the fill hole. Select the required volume from the oil filling quantities table. Refit screw (1) and sealing washer (2).

Oil: white ISO VG15 FP175C

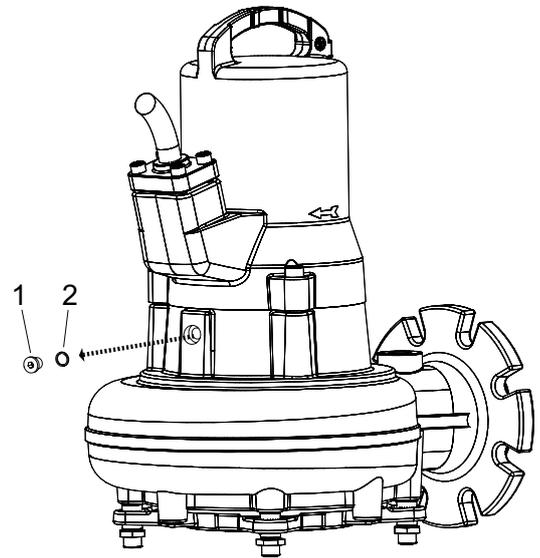

12.3 Oil quantities (liters)


Pump Type	Motor		L
	50 Hz	60 Hz	
AS 0530	S12/2	S16/2	0.43
AS 0530	S17/2	S18/2	0.43
AS 0530	S26/2	S30/2	0.43
AS 0630	S10/4	S10/4	0.56
AS 0630	S13/4	S16/4	0.56
AS 0630	S22/4	S25/4	0.56
AS 0631	S12/2	S16/2	0.43
AS 0631	S17/2	S18/2	0.43
AS 0631	S30/2	S35/2	0.43
AS 0641	S30/2	S35/2	0.43
AS 0830	S10/4	S10/4	0.56
AS 0830	S13/4	S16/4	0.56
AS 0830	S22/4	S25/4	0.56
AS 0831	S22/4	S25/4	0.56
AS 0840	S12/2	S16/2	0.43
AS 0840	S17/2	S18/2	0.43
AS 0840	S26/2	S30/2	0.43
AS 0841	S13/4	S16/4	0.56
AS 0841	S22/4	S25/4	0.56

12.4 Bottom plate adjustment (Contrablock)

At manufacture, the Contrablock bottom plate is fitted to the volute with the correct clearance gap set between the impeller and the bottom plate (for optimum performance max 0.2 mm).


12.4.1 Re-setting the clearance gap following wear

AS 0641 and 0840:

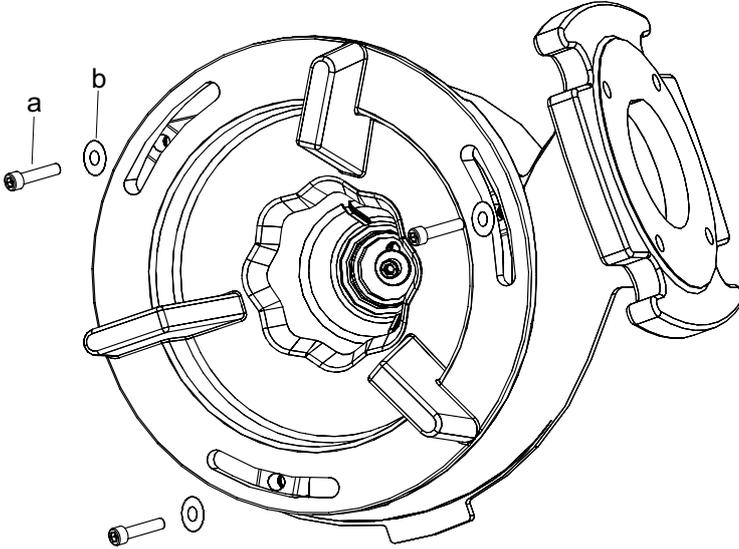

1. Loosen the three securing screws (a) and washers (b).
2. Rotate the bottom plate anti-clockwise to lower it until there is contact with the impeller.
3. Rotate the bottom plate clockwise until there is 0.3 mm to 0.5 mm clearance between it and the impeller.
4. Tighten the securing screws to 17 Nm.
5. Check that the impeller rotates freely.

AS 0831 and 0841:

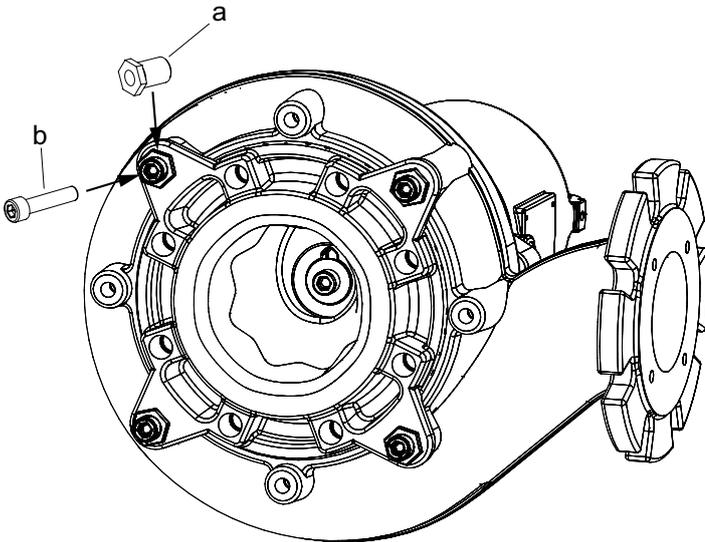

1. Loosen the four securing screws (b).
2. Rotate the four adjusting screws (a) anti-clockwise until there is contact between the bottom plate and the impeller.
3. Rotate the adjusting screws clockwise until there is 0.3 mm to 0.5 mm clearance between the bottom plate and the impeller.
4. Tighten the securing screws to 33 Nm.
5. Check that the impeller rotates freely.

12.5 Bearings and mechanical seals

AS pumps are fitted with lubricated-for-life ball bearings. Shaft sealing between the motor and hydraulic section is by means of a mechanical seal (Sic/Sic). Seal at the motor side is by an oil lubricated lip seal.

ATTENTION! *Once removed, bearings and seals must not be re-used, and must be replaced in an approved workshop with genuine Sulzer spare parts.*

12.6 Changing the power cable



The power cable must be replaced by the manufacturer, its service agent or a similar qualified person, in strict adherence to relevant safety regulations.

12.7 Clearing pump blockage

12.7.1 Instructions for operator

The operator should only attempt to unblock the pump by re-setting the overload reset button or MCB on the control panel. The initial start force may be enough to displace any clogged material. If the pump continues to trip out on restart then a qualified service agent must be called.



To carry out the procedure above safely the control panel must not need to be opened to do so. The overload reset button or MCB must therefore be an externally mounted design.

12.7.2 Instructions for service personnel



The pump must be isolated from the power supply before removing it from the installation.



Adequate personal protective equipment must be worn at all times (see Section 3.1).



Lifting safety regulations must be adhered to when lifting the pump (see Section 8).

1. Ensure that the pump is secured so that it cannot topple or roll over.
2. Use pump pliers to check for rags etc in the volute inlet and discharge, and try to turn the impeller by hand to check if there is anything jammed behind it.
Attention: never use fingers, even in gloves, to check around the volute internally due to the danger of something sharp piercing the gloves and skin.
3. Remove the bottom plate and clear out any debris with a pliers.
4. If the impeller is still jammed from behind then the impeller has to be removed.
5. The impeller and bottom plate should be checked for impact and wear damage.
6. Once the debris has been cleared out the impeller is refitted and should rotate freely by hand.
7. Refit the bottom plate.
Attention: the gap between the bottom plate must be checked and adjusted if necessary (see Section 12.4). This is important as a measure to help prevent future blockages.
8. Reconnect the pump to the power source and dry run to check audibly for bearing or other mechanical damage.
Attention: secure the pump so it cannot roll or fall on starting, and do not stand near the pump or directly in front of the pump discharge.

12.8 Cleaning

If the pump is used for transportable applications, then in order to avoid deposits of dirt and encrustation it should be cleaned after each usage by pumping clear water. In the case of fixed installation, we recommend that the functioning of the automatic level control system be checked regularly. By switching the selection switch (switch setting "HAND") the sump will be emptied. If deposits of dirt are visible on the floats then these should be cleaned. After cleaning, the pump should be rinsed out with clear water and a number of automatic pumping cycles carried out.

13 Troubleshooting Guide

Fault	Cause	Fix
Pump does not run	Leakage sensor shutdown.	Check for loose or damaged oil plug, or locate and replace faulty mechanical seal / damaged o-rings. Change oil. ¹⁾
	Air lock in volute	Shake or raise and lower the pump repeatedly until resulting air bubbles no longer appear at surface level.
	Level control override.	Check for float switch that is faulty or tangled and held in OFF position in sump.
	Impeller jammed.	Inspect and remove jammed object. Check gap between impeller and bottom plate and adjust if necessary.
Pump switching on/off intermittently	Gate valve closed, non-return valve blocked.	Open gate valve, clean blockage from non-return valve.
	Temperature sensor shutdown.	Motor will restart automatically when pump cools down. Check thermal relay settings in control panel. Check for impeller blockage. If none of above, a service inspection is required. ¹⁾
Low head or flow	Wrong direction of rotation.	Change rotation by interchanging two phases of the power supply cable.
	Gap too wide between impeller and bottom plate	Reduce gap (see Section 12.4).
	Gate valve partially open.	Open valve fully.
Excessive noise or vibration	Defective bearing.	Replace bearing. ¹⁾
	Clogged impeller.	Remove and clean hydraulics. See Section 12.7.
	Wrong direction of rotation.	Change rotation by interchanging two phases of the power supply cable.



Before commencing any inspection or repair work the pump should be completely disconnected from the mains by a qualified person and care should be taken that it cannot be inadvertently switched back on.

¹⁾ Pump must be taken to approved workshop.

SERVICE LOG

Date	Hours of Operation	Comments	Sign

SERVICE LOG

Date	Hours of Operation	Comments	Sign

SERVICE LOG

Date	Hours of Operation	Comments	Sign

